 
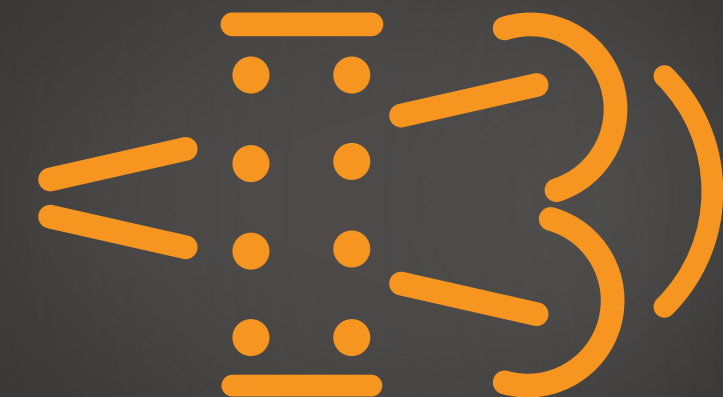 


## HERE'S AN EASY-TO-USE GUIDE FOR WHAT YOU NEED TO KNOW:

- What solid & flashing indicator lights mean
- 2 ways to regenerate an engine
- Step-by-step process for a parked regeneration

SHARE THE FACTS BY DISPLAYING THIS GUIDE!

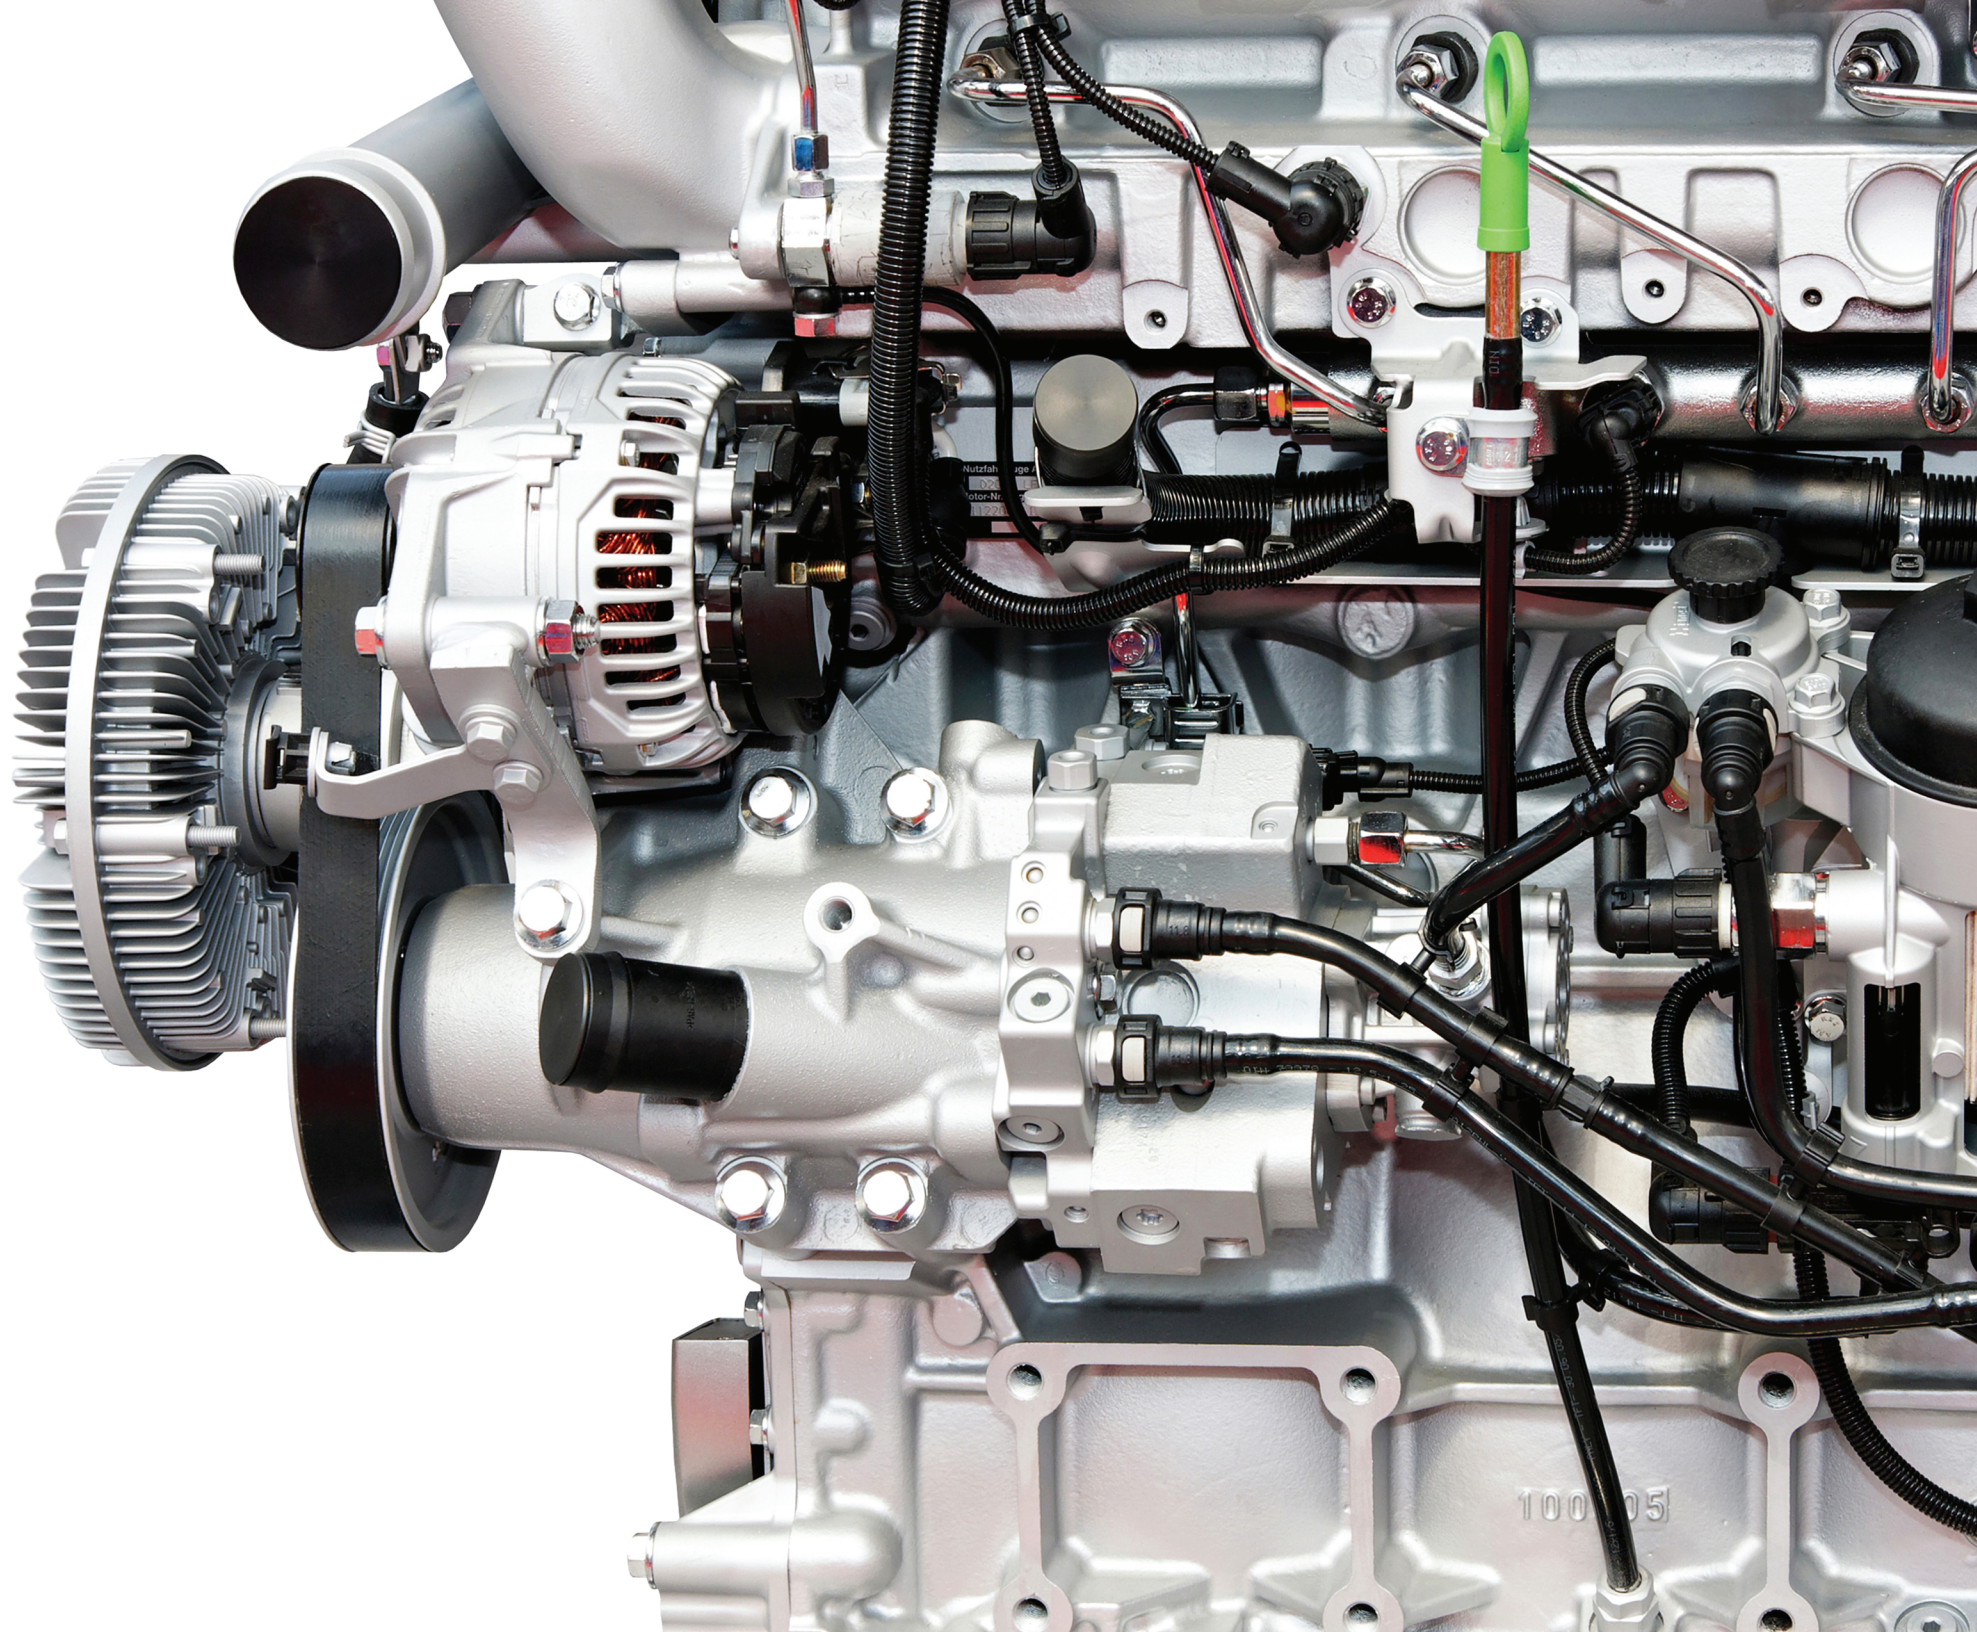

**GOT DPF?**  
DO YOU KNOW  
WHAT TO LOOK FOR  
WHEN THE DPF LIGHTS  
COME ON?



# GOT DPF?

## INSTRUCTIONS FOR DRIVERS

DIESEL PARTICULATE FILTER (DPF) INDICATOR  
LIGHTS AND ACTIONS REQUIRED

### THE DPF STATUS LIGHT IS ON SOLID

THIS IS THE FIRST INDICATION THE VEHICLE MAY REQUIRE REGENERATION. SEVERAL HOURS OF OPERATION MAY BE POSSIBLE BEFORE ANY DE-RATE OF THE ENGINE OCCURS.

### THE DPF STATUS LIGHT IS FLASHING

THIS IS A **SECOND WARNING** THAT A PARKED REGENERATION IS REQUIRED. YOU SHOULD PERFORM A PARKED REGENERATION AS SOON AS POSSIBLE.

 
### YOU HAVE TWO OPTIONS:

01 Drive the truck at uninterrupted highway speeds for automatic regeneration.

02 Follow instructions below for performing a parked regeneration.

## INSTRUCTIONS FOR PERFORMING A PARKED REGENERATION

READ THE SUNVISOR DECAL AND GO OVER THESE INSTRUCTIONS OR FOLLOW THE INSTRUCTIONS BELOW:

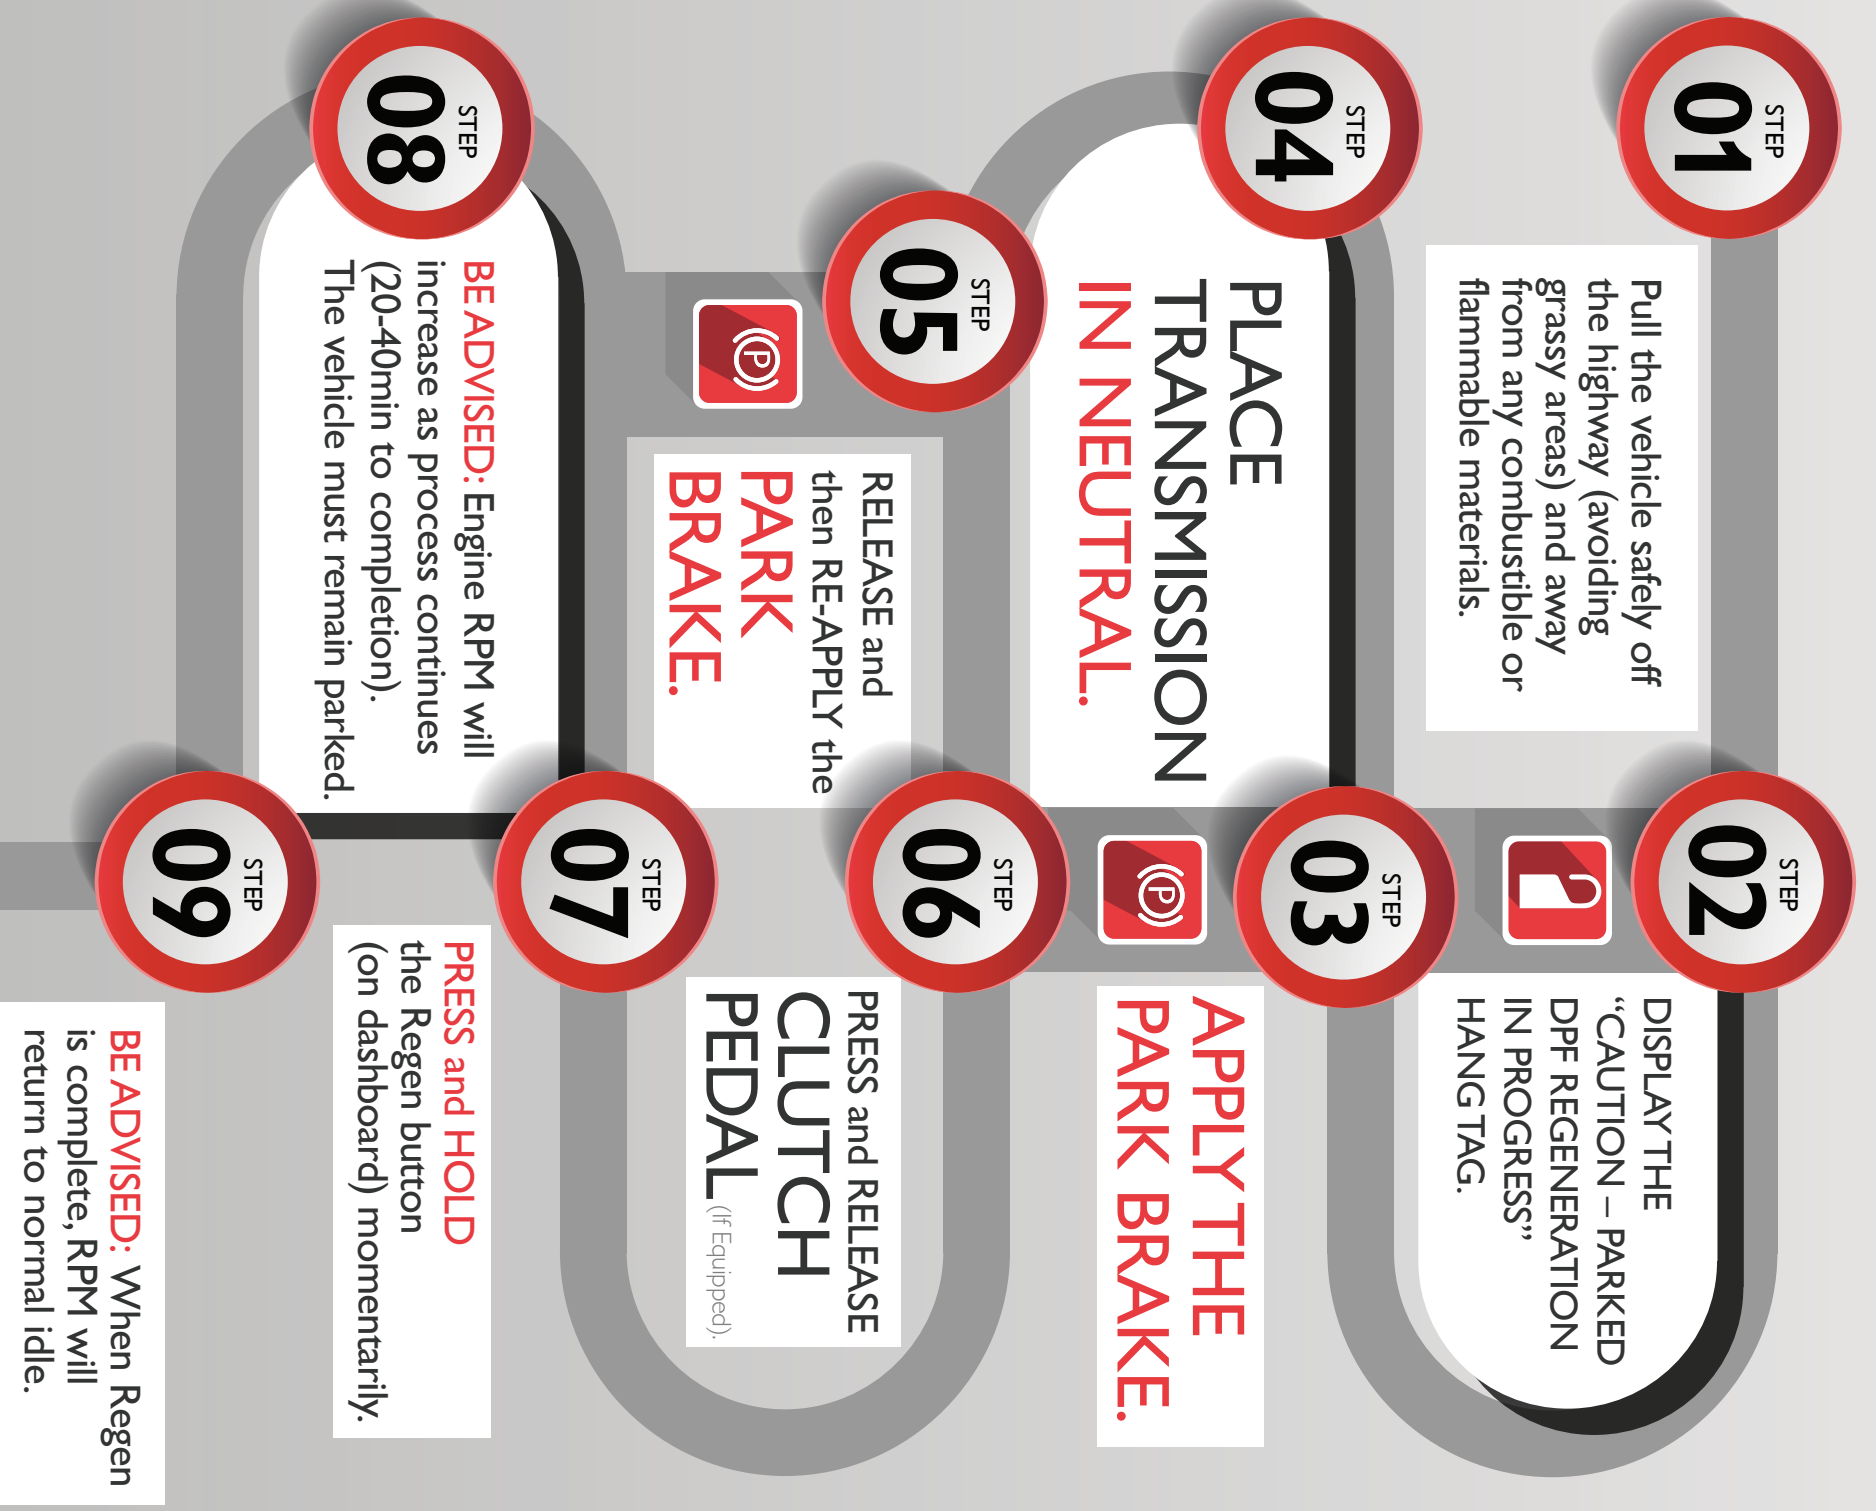

## OTHER INDICATOR LIGHTS AND ACTIONS REQUIRED



### THE HIGH EXHAUST SYSTEM TEMPERATURE (HEST) LIGHT COMES ON.

The HEST light comes on while regeneration is in process and may stay on after regeneration is complete. It indicates that the exhaust temperature is high. This is an informational light and no action is required. The vehicle may be driven. Temperature will soon return to normal and the HEST lamp will go off.



### THE CHECK ENGINE LIGHT IS ILLUMINATED WITH DPF LIGHT FLASHING.

The Check Engine Light comes on if parked regeneration was not performed earlier. Parked regeneration must be performed IMMEDIATELY. An intermittent beeping may also be heard. Safely pull vehicle off the road and review regeneration steps noted above.



### THE STOP ENGINE LIGHT COMES ON.

The Stop Engine Light comes on when regeneration has been ignored. It is an indication that the DPF is plugged and the engine requires service. You must shut down the engine and make arrangements for roadside service.